

BELT ADJUSTMENT INSTRUCTIONS

1. YOUR MOWER WILL SHIP TO YOU ADJUSTED TO THE SECOND HOLE AS SHOWN.
2. AFTER 1 HOURS OPERATION CHECK THE BELT TENSION. THE SPRING TENSION SHOULD BE ADJUSTED SO THAT THE SPRING IS EXTENDED ONE INCH.
3. CHECK BELT PERIODICALLY TO INSURE PROPER BELT TENSION.
4. DO NOT OVER TENSION.
5. KEEP THE INSIDE OF THE BELT HOUSING CLEAN AND FREE OF WATER.
6. KEEP THE IDLER ARM TENSIONER NUT JUST TIGHT ENOUGH TO DAMPEN THE IDLER ARM. DO NOT OVER TENSION.

