



1. When changing or servicing the air cleaner make sure that the two rubber seal inserts are in their proper places. Note that the shorter insert "41-032-02" needs to be above the wing nut. The longer seal "230046" needs to be located under the inner cover.

2. Do not over tighten the wing nuts. They should be tight enough to establish a good seal. However, over tightening can crush the filter and allow dirt to enter the intake system and destroy the engine.